

Wiring a Barrier Gate Operator



A MAX gate operator can activate most barrier gate operators using the Matrix 1 **STRIKE/GND** input and **GATE STATUS OPEN/COM** relay.

GATE STATUS OPEN/COM Relay: Activates when gate gets to the **OPEN** position, which will then activate the barrier gate operator's arm to raise.

Opening Sequence of Barrier and Gate Operator:

- ① Opening device is activated.
- ② Barrier activates Matrix 1 STRIKE input, Gate opens.
- ③ Open gate activates Gate Status OPEN relay.
- ④ Gate Status Open relay activates barrier arm to raise.

NOTE: Refer to your specific barrier gate operator manufacturers installation manual for more information about wiring and layout.

