

## Aeromax 200K Keypad Programming Guide B

### Programming a **LATCHING** user code:

#### Programming a **LATCHING** user code:

##### SETUP Keypad RELAY 4 for latching:

1. Enter **\*3** + Master code (Default Master code is 123) + **#**
2. Enter **3** + **#**
3. Enter **99** + **#**
4. Enter **\*\*** (to exit programming)

##### Program a new **LATCHING** user code:

1. Enter **\*1** + Master code (Default Master code is 123) + **#**
2. Enter **1** + **#**
3. Enter **User ID (1-500)** + **#**
4. Enter **User Code (3-8 Digits)** + **#**
5. Enter **1** + **#**
6. Enter **#** (to complete programming)
7. Enter **\*\*** (to exit programming)

#### How to use a **LATCHING** code During NORMAL OPERATION:

Enter (**latching user code**) + **1** + **#** (to LATCH relay ....gate/door OPEN)

Enter (**latching user code**) + **0** + **#** (to UNLATCH relay ...gate/door CLOSED)