

WIRELESS REPEATER

Requires Either Max Door Controller (Intelle 16Z Plus or Intelle 8Z), and Max Wireless Entry Point (Wireless Card Reader, Wireless Door Controller Keypad, or Wireless Access Point)



Wireless Repeater
MAX WR



Extends Entry Point wireless range
Bridges the gap caused by signal-blocking obstacles



OR




Maximum Controls LLC • 949.699.0220

www.MAX.US.com

MAX WIRELESS REPEATER

OVERVIEW

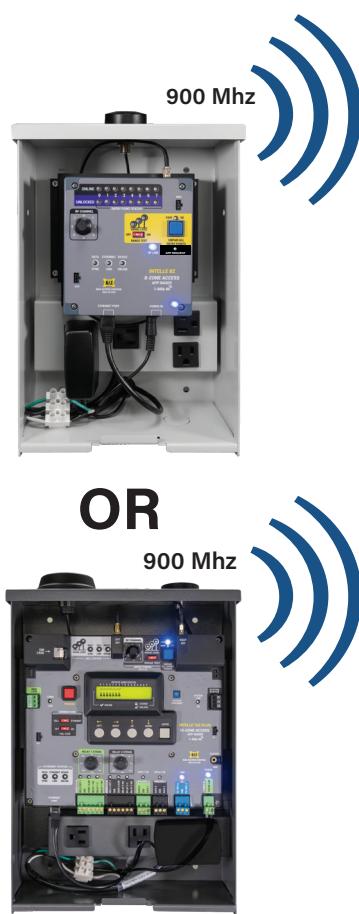

MAX WIRELESS REPEATER

•EXTENDS WIRELESS RANGE

- Bridges the gap caused by signal-blocking obstacles—such as trees, metal structures, and/or concrete walls between any entry point and door controller

EXTENDED RANGE:

- Outdoor- 2 Mile (line-of-sight)
- Indoor- 2000 ft (Urban)



Max Wireless Repeater



Max Wireless Repeater



Max Wireless Repeater



Max Wireless Card Reader



Max Access Point



Max Wireless Door Controller Keypad

Intelle 16Z PLUS

Channel A
Antenna 900Mhz
(to Intelle Door Controller unit)




Channel B
Antenna 900Mhz
(to entry point unit)

Cable Gland
(for power in wires)

MAX WIRELESS REPEATER


OVERVIEW

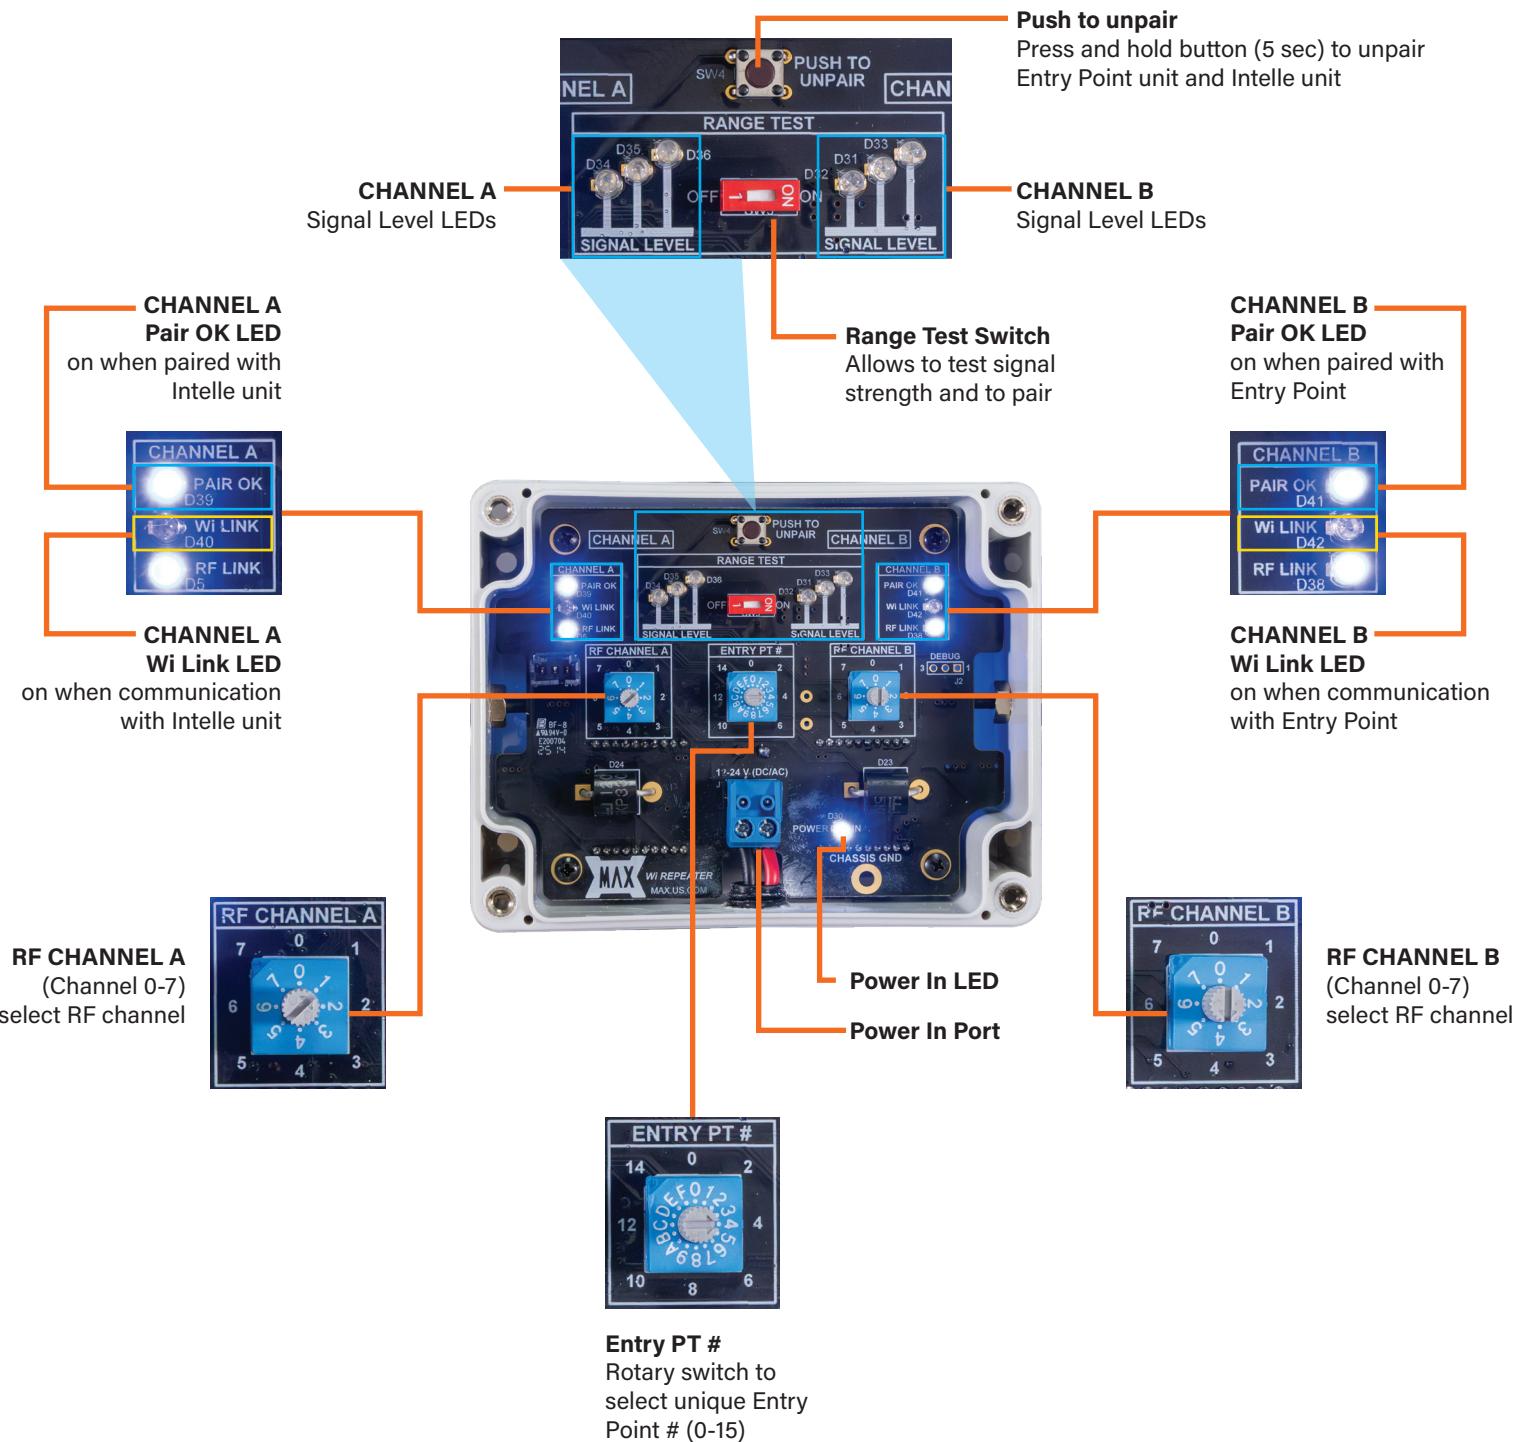

ENTRY POINT WIRING & SETUP

RANGE TEST & PAIRING BETWEEN INTELLE 16Z PLUS AND WI ACCESS POINT (USING WIRELESS REPEATER)

Note: The same Range Test & Pairing process is used for Intelle 8z and other Wireless Entry Points

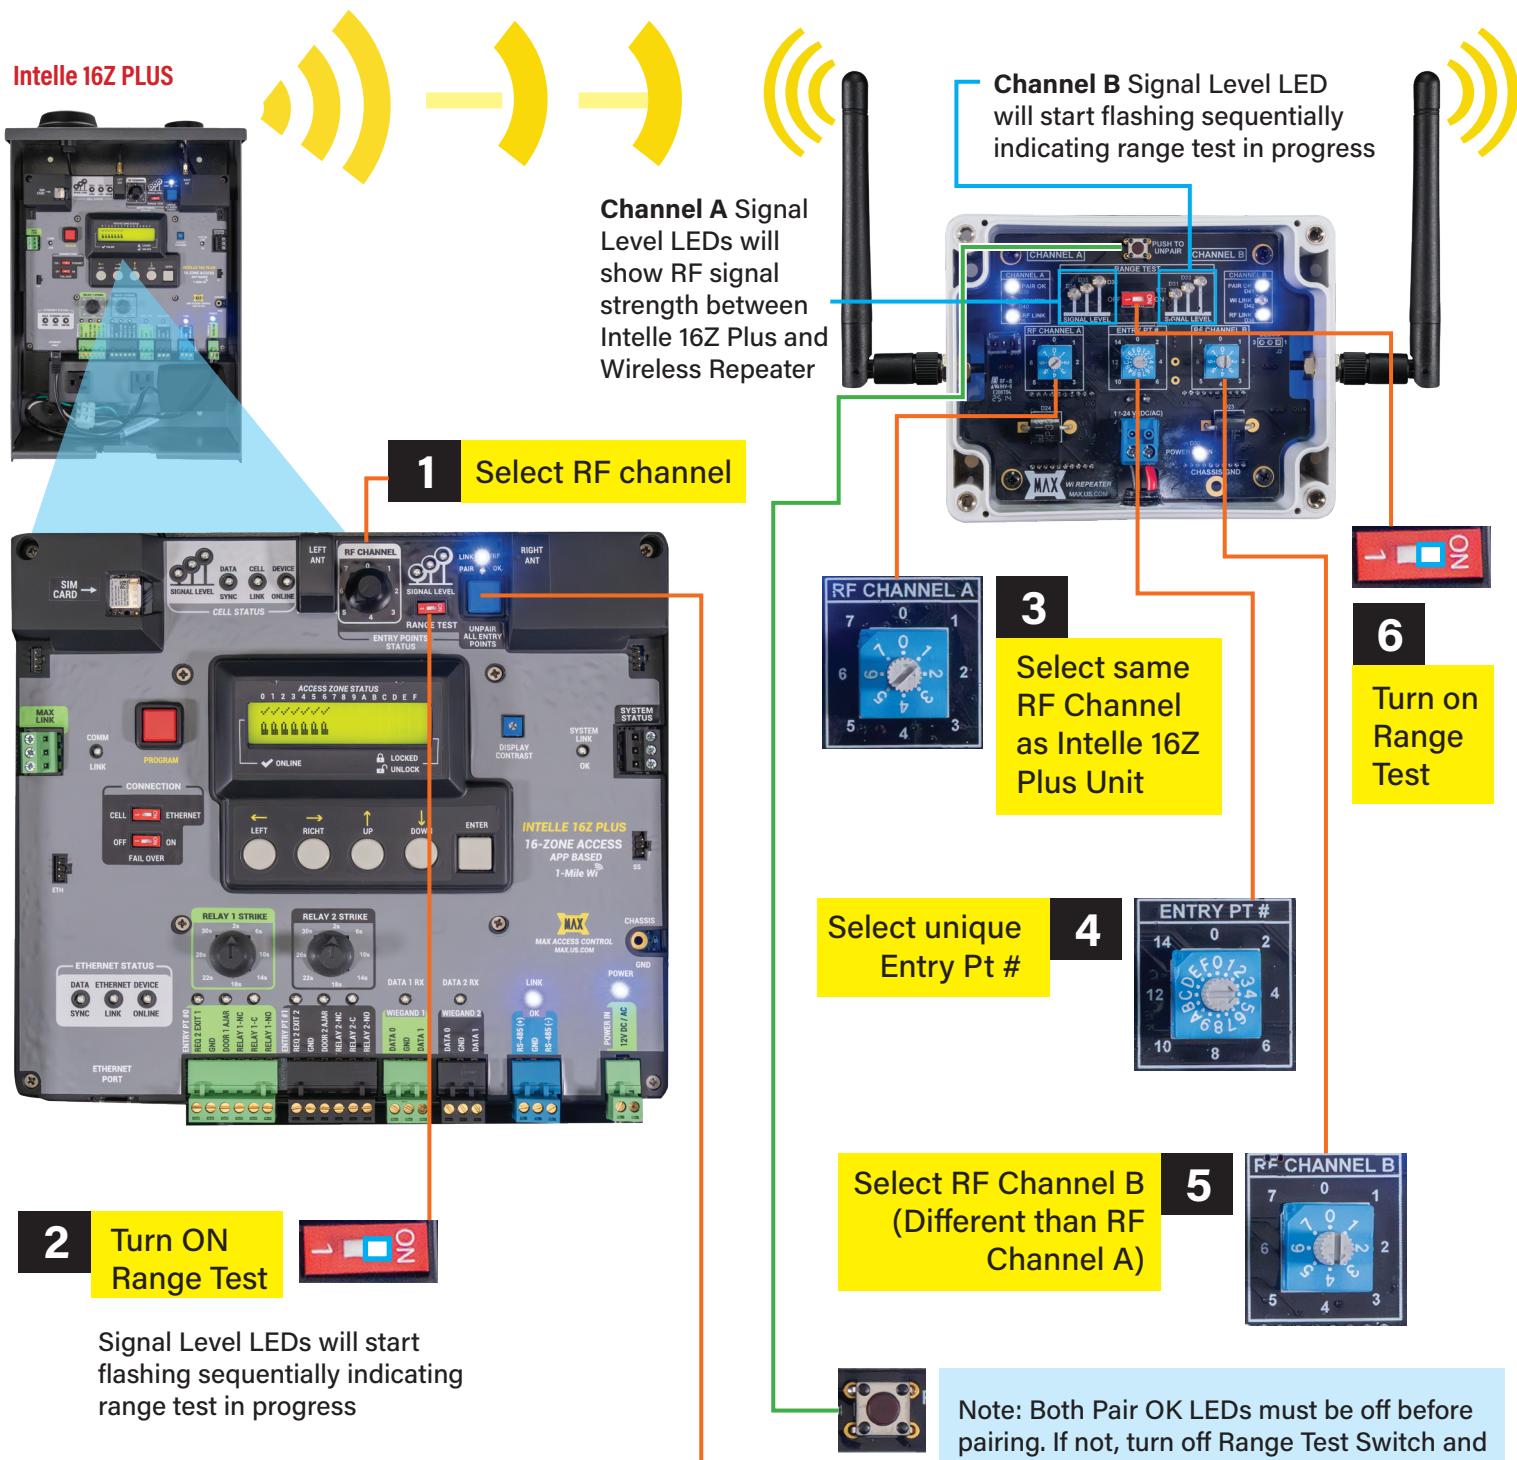


Note: Both Pair OK LEDs must be off before pairing. If not, turn off Range Test Switch and press and hold "Push to Unpair" button for 5 sec until LEDs turn off.

Note: To see signal strength between Wireless Repeater and Wi Access Point, check **Signal Level LEDs** on the **Wi Access Point**.

ENTRY POINT WIRING & SETUP

RANGE TEST & PAIRING BETWEEN INTELLE 16Z PLUS AND WI ACCESS POINT (USING WIRELESS REPEATER)

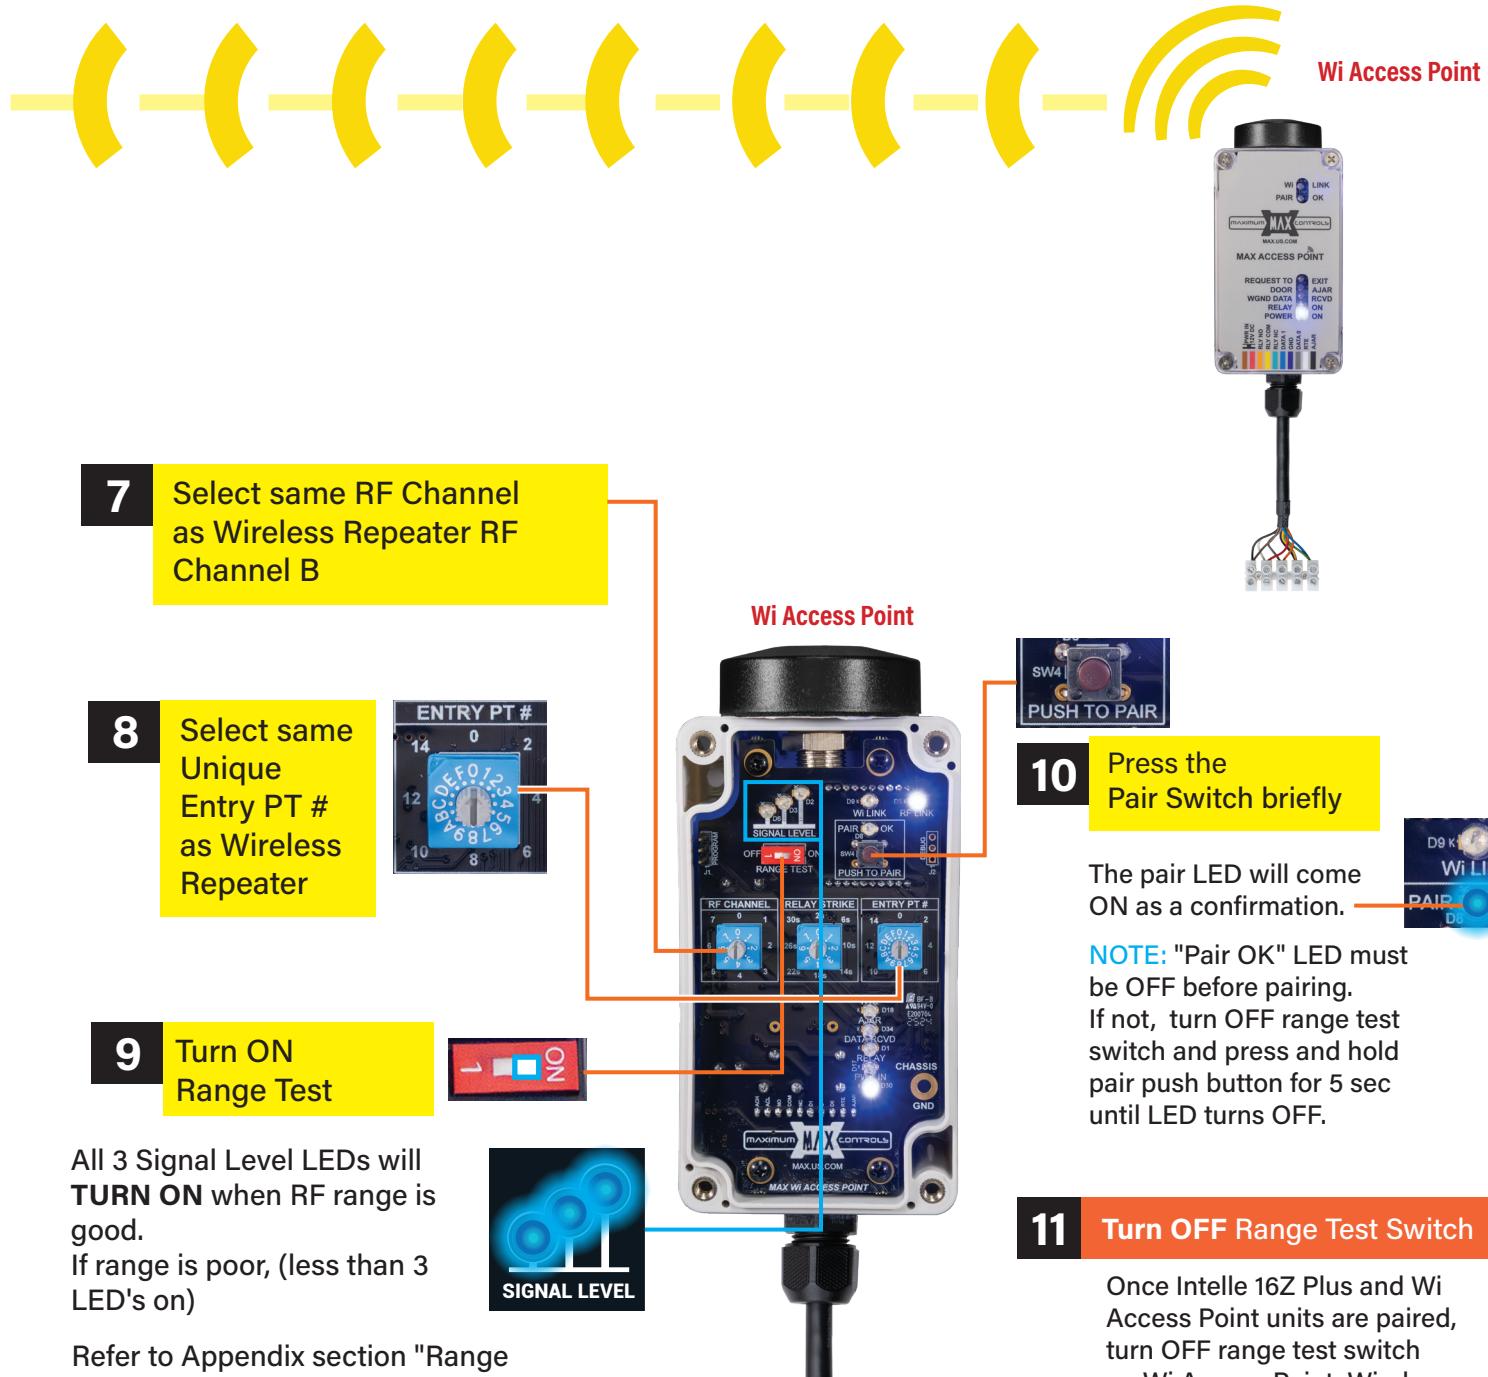

If Entry Point # on wireless unit is changed while paired to the Intelle 16Z Plus, unit must be unpaired and paired again to the Intelle 16 Z Plus with the new unique Entry Point #

MAX WIRELESS REPEATER

